


---

## Step 5


- stop inflating the ball when the stitches become even with the surface of the cover (the stitches may not tighten the fabric, or be too loose). Do not overfill.

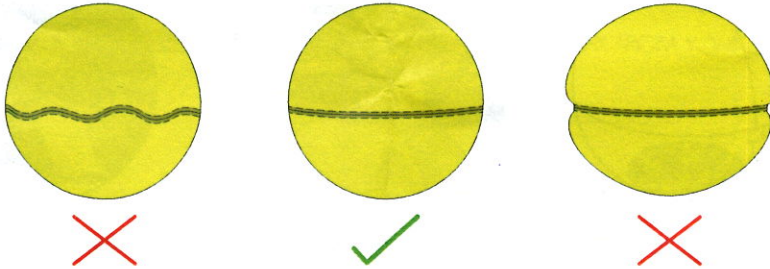

---

## Step 6

- place the ball on the base C and adjust the lines

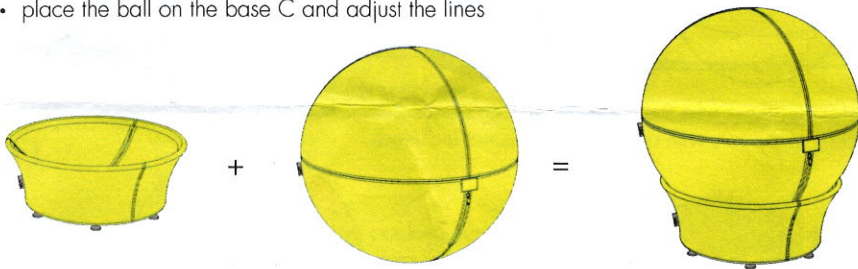

---

## Care and Maintenance

### FABRIC COVER:

- the fabric covers are washable
- for washing separate the fabric cover, rubber weight, inflatable ball and metal base (see the following instructions)
- do not wash the rubber weight and metal base
- wash the cover inside out, pull the zippers about 95%
- wash the cover with similar colours only
- for fabrics please follow maintenance instructions below



### INFLATABLE BALL, RUBBER WEIGHT AND METAL BASE:

- wipe with damp cloth